Cut-and-fold paper basket

Solid lines are cuts. Dashed net lines are folds. Ask an adult to help with cutting.

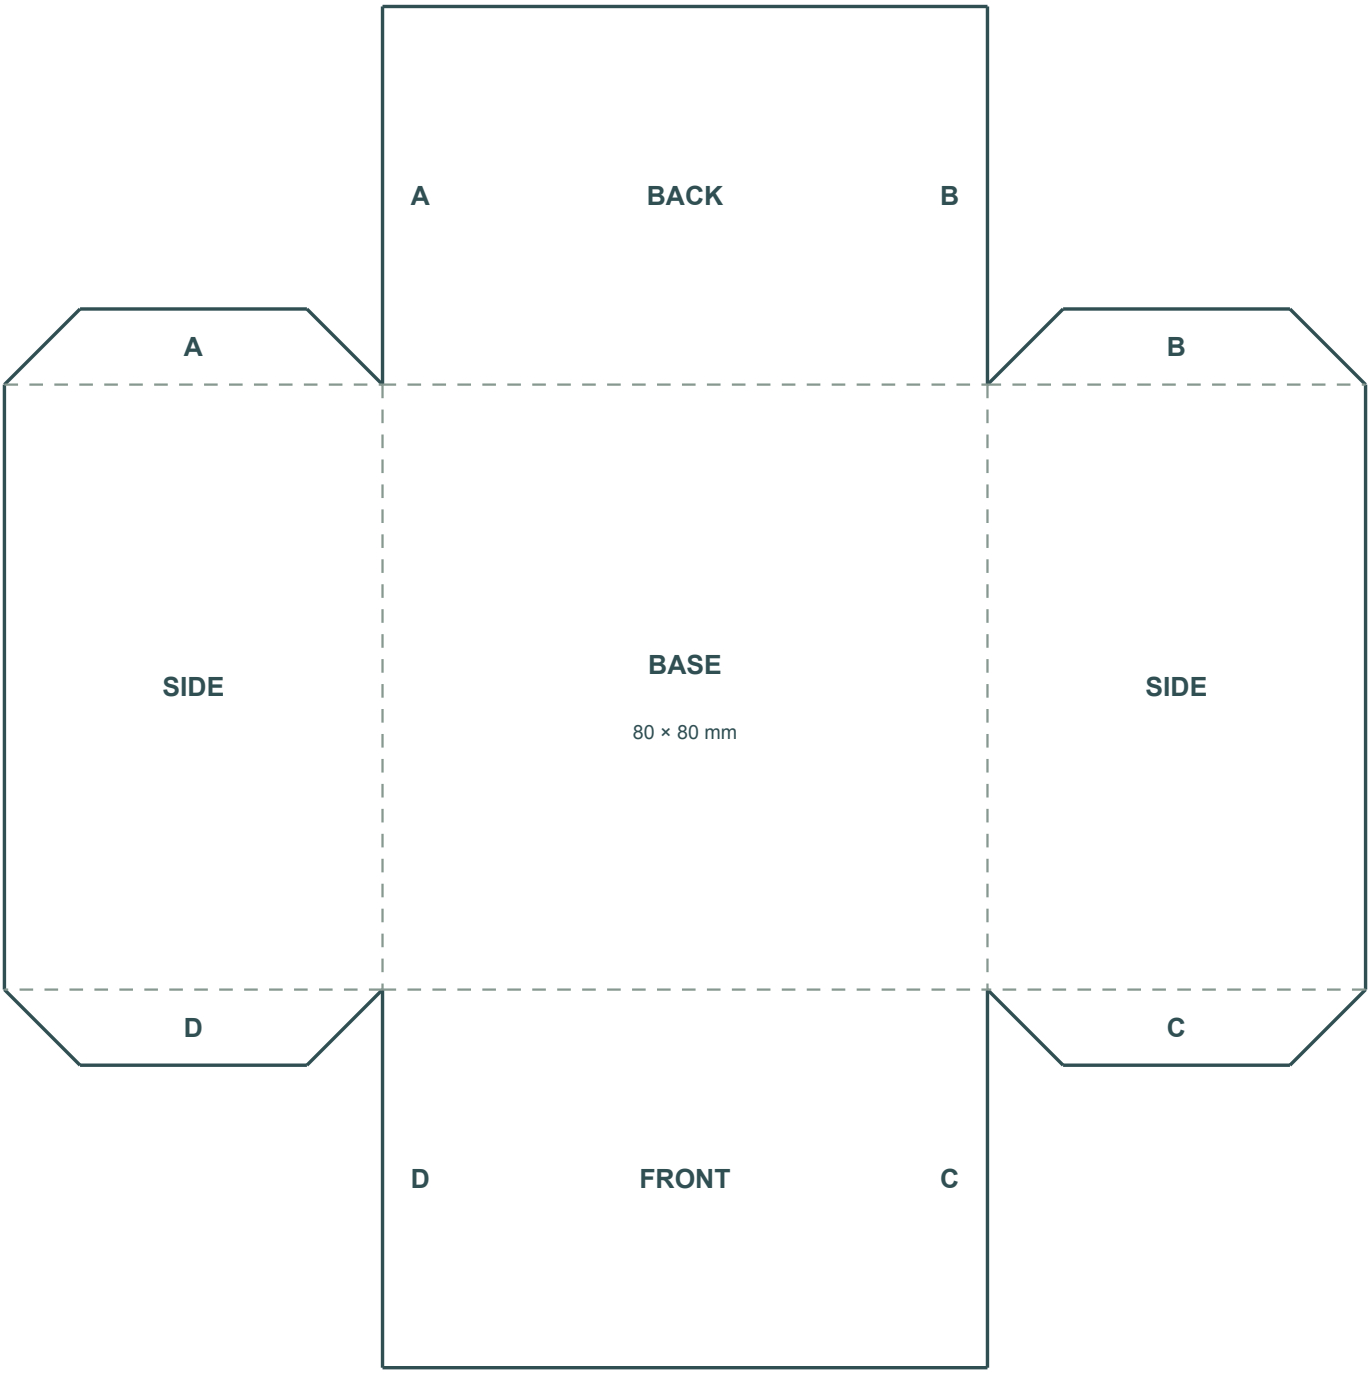

Cut out the handle separately. The end marks show the two 15 mm joining sections.

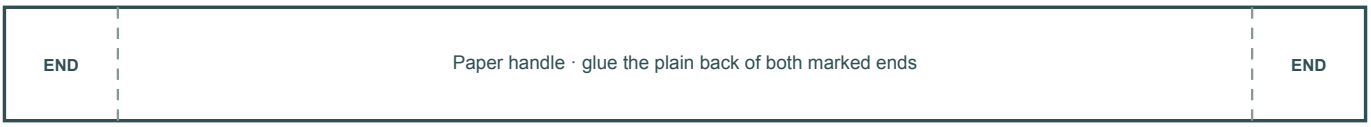

Start folding with the print face UP. Keep every tab on the inside. See page 2.

This line should measure 50 mm at 100%.

Make your paper basket

Use page 1 for the pieces. You need scissors and a little glue or small tape pieces.

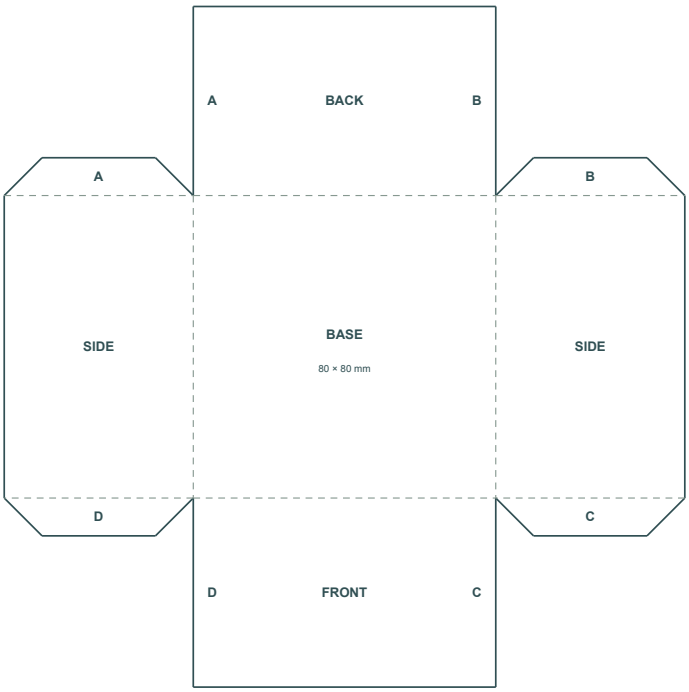

Cut solid. Fold dashed.

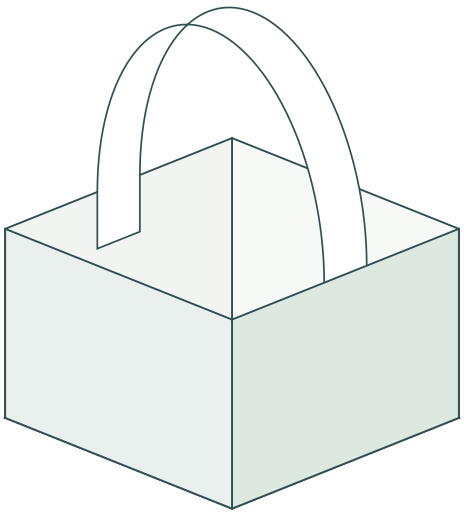

Assembly schematic

Keep the tabs inside.

1. Cut and crease

Cut the solid outline and the handle. Keep all four tabs attached.

Crease the eight dashed net lines, then open the net out again.

2. Start with the print face up

Lift the BACK and FRONT walls. Raise the two SIDE walls.

Fold the four tabs towards the inside of the basket.

3. Join matching letters

Glue the plain back of tab A against the inside edge marked A.

Repeat B to B, C to C and D to D. Hold each join while it sets.

4. Add the handle

Glue the plain back of both marked end sections. Curve the strip over the opening.

Press one end inside each SIDE wall, in the middle. Let the glue dry.

This line should measure 50 mm at 100%.